

Users Guide & Installation Handbook



Belling BI 60 I

belling[®]

think of everything



ECO INDUCTION NOTE

When cooking using the induction function you will decrease the energy used by 50% whilst heating and roasting your food using the cast iron cook pot with lid.

IMPORTANT NOTICE

Please note the cooling fan fitted to this appliance is an integral part of its safety and functionality.

When the appliance is installed care must be taken that the cooling fans performance is not impeded by any objects coming into contact with it. (Installation pipes, leads etc)

Care must also be taken that there is sufficient air flow at the rear of the appliance for the cooling fan to run at its optimum efficiency. (Particularly Built In appliances) See clearance dimensions in the installation section of the booklet.

During use the Appliance must never be disconnected from the Mains supply as this will seriously affect the safety and performance of the appliance, particularly in relation to surface temperatures becoming hot and gas operated parts not working efficiently.

The cooling fan is designed to run on after the control knob has been switched off to keep the front of the appliance and the controls cool until the appliance has naturally cooled itself.

Contents

| | |
|--|------------------|
| User's Section | 2 - 29 |
| Introduction | 2 |
| Be Safe - Not Sorry | 4 |
| Induction Oven Introduction | 5 |
| Induction Oven Using the Cast Iron Pot | 8 |
| Induction Oven - Function Settings | 8 |
| Induction Oven - Using the trivets | 9 |
| Grill Introduction | 11 |
| Using the Grill | 12 |
| Fanned Oven | 13 |
| Cooking Frozen & Chilled Foods | 15 |
| Baking Guide | 16 |
| Traditional Fruit Cakes | 17 |
| Roast Turkey | 17 |
| Roasting Guide | 18 |
| Automatic Cooking Introduction (Selected Models) | 19 |
| Programmer/Clock (Selected Models) | 21 |
| Cleaning | 26 |
| | |
| Installation Instructions | 29 - 32 |
| Step 1: Prepare installation | 29 |
| Step 2: Connect to electricity supply | 31 |
| Step 3: Check edging strip | 31 |
| Step 4: Secure appliance into housing unit | 32 |
| | |
| Technical Data | 33 |
| | |
| Belling Customer Care | Back Page |

Please keep this handbook for future reference, or for anyone else who may use the appliance.

Introduction

Thank you for choosing a Belling appliance

We hope that the following information will help you to familiarise yourself with the features of the appliance, and to use it successfully and safely.

Our policy is one of constant development and improvement. Strict accuracy of illustrations and specifications is not guaranteed. Modification to design and materials may be necessary subsequent to publication.

Please read the instructions in this handbook before using or installing this appliance.

Your 1st Year Guarantee

To fulfil the conditions of your guarantee, this appliance must be correctly installed and operated, in accordance with these instructions, and only be used for normal domestic purposes.

Please note that the guarantee, and Service availability, only apply to the UK and Republic of Ireland.

Before using the appliance for the first time, remove any protective polythene film and wash the oven shelves and furniture in hot soapy water to remove their protective covering of oil. Even so, when you first switch on the oven or grill you may notice a smell and some smoke.

This appliance is designed to fit into a standard 600mm wide housing unit with a minimum internal height of 580mm.

Electrical connection

Please refer to installation instructions for electrical connection.

In your own interest, and that of safety, make sure that the installation is carried out by a competent person.

Disconnection of electric appliances should always be carried out by a competent person.

Warning: This appliance must be earthed.

Condensation

When hot and cold air meet, condensation forms. The outer door is air cooled and the inner door gets hot, so some condensation might form; this is normal and will disappear within 10 - 15 minutes.

Air Circulation

Please refer to the **Installation Instructions**.

For the safe and continued operation of the induction heating element, it is important to ensure that there is enough space for air to circulate around the underside of the product, and that the integrated cooling fan is not blocked. This is achieved by using runners or ensuring that there is at least a minimum gap of 20mm between the underside of the oven and the next surface.

Introduction

Cooling fan

The cooling fan helps to keep the exterior cool during normal use. When an element is operated, you should hear the cooling fan switch on automatically and be able to feel air evacuating from the appliance vents just below the fascia.

The cooling fan will continue to operate for approximately 10 minutes after turning off the elements. This is normal. If there is no such indication that the fan is operating, the appliance will require servicing. **DO NOT USE THE APPLIANCE UNTIL IT HAS BEEN SERVICED.** Switch the appliance off at the mains and contact Customer Support. **NOT APPLICABLE WITH INDUCTION FUNCTION.**

Glass door panels

To meet the relevant standards of Domestic cooking appliances, all the glass panels on this appliance are toughened to meet the fragmentation requirements of BS 3193. This ensures that, in the unlikely event that a panel breaks, it does so into small fragments to minimise the risk of injury.

Please take care when handling, using or cleaning all glass panels as any damage to the surfaces or edges may result in the glass breaking without warning or apparent cause at a later date. Should any glass panel be damaged, we strongly recommend that it is replaced immediately.

To replace an oven light bulb

WARNING - switch off the electricity supply to the appliance at the socket, to avoid the risk of electric shock.

Wait until the oven is cool, then remove the oven shelves.

The oven light is at the rear of the oven cavity.

Unscrew the lens cover (turn anticlockwise). Unscrew the bulb and replace. Replace lens cover.

Please note that the oven light bulb is not covered by guarantee.

Environmental Protection

We are committed to protecting the environment and operate an Environmental Management System which complies with BS EN ISO 14001:1996.

Disposal of packaging

- All our packaging materials are recyclable and environmentally friendly.
- Please help us to protect our environment by disposing of all packaging in an environmentally friendly manner.
- Please contact your local authority for the nearest recycling centre.

Caution: Packaging materials can pose a risk of suffocation - keep away from children.

Be Safe - Not Sorry

When you are cooking, keep children away from the vicinity of appliance.

This product is designed as a domestic cooking appliance for the preparation and cooking of domestic food products, and should not be used for any other purpose.

- Remove all packaging from the appliance before using for the first time.
- Remove all packaging from the cook pot.
- Be careful when placing in or lifting the pot out of the oven as there may be hot liquids or food inside.
- Take care when carrying the pot in and out of the oven.
- Take care that you do not damage the glass in the base when taking the pot in and out of the oven.
- Make sure you read and understand the instructions before using the appliance.
- Keep electrical leads short so they do not drape over the appliance or the edge of the worktop.
- Keep all flammable materials (such as curtains, furnishings & clothing) away from the appliance.
- Parts of the appliance may be hot during or immediately after use. Care should be taken to avoid touching heating elements inside the oven. Allow sufficient time for the appliance to cool after switching off.
- Switch off the electricity supply before cleaning the appliance.
- Do not drape tea towels over the flue vents as this creates a fire hazard.
- When opening the appliance door, take care to avoid skin contact with any steam which may escape from the cooking.
- Using aluminium foil to cover the grill pan, or putting items wrapped in foil under the grill creates a fire hazard. The high reflectivity can also damage the element.
- Do not use foil on oven shelves or on the oven base, or allow it to block the oven flue, as this creates a fire hazard and prevents heat circulation.
- Do not use the oven with the door inner glass panel removed.
- Use oven gloves when removing hot food / dishes from the oven or grill. The oven / grill and utensils will be very hot when in use.
- When cooking heavy items - eg; turkeys - do not pull the oven shelf out with the item still on the shelf.
- Switch off the electricity supply before replacing the oven light bulb (if fitted), to avoid the risk of electric shock.
- Never use the appliance for heating a room.
- **Warning:** This appliance must be earthed.

↓ INDUCTION OVEN

All installation, servicing and maintenance work should be carried out by a competent person who will comply with current Regulations. This appliance must be earthed.

Standards and Requirements.

When you have finished cooking check that all controls are in the off position.

Introduction

This oven can be installed on the runner system provided or by placing on the cabinet shelf when you have produced a cut out as illustrated in the installation instructions within this handbook.

Safety Warnings!

1) The glass ceramic located in the base of the oven (cavity) can get hot whilst cooking; even though the cook zone itself does not generate heat. The heat generated is conducted back from the hot cooking pot or pan.

2) This induction oven complies with the applicable EMC and EMF standards. Therefore it should not interfere with other electronic units. Persons fitted with a pacemaker or any other electrical implant should clarify with their doctor or the producer of the implant, whether their implant is adequate and fail-safe, the pacemaker must be designed in compliance with the appropriate regulations.

3) Its important that you use the cast iron pot supplied or a good quality ferrous based, flat bottomed cook pot or pans. If a cook pot or pan creates a large air gap over the middle of the cooking zone , the accuracy of the temperature sensing can be affected.

4) Warning:- Do not use the oven if the glass is cracked, as electrical parts are directly beneath. To avoid the possibility of electric shock, turn off the electricity supply to the hob at the socket and arrange a service call.

5) Commercial simmering aids should not be used as they create excessive temperatures that can damage the surface and may cause a hazard.

Note - Take care not to catch the edge of the glass base when placing the cook pot in and out of the oven as this could cause the glass to chip.

Note - Take care not to slide the pot across the glass base as this will scratch the base of the oven.

↓ INDUCTION OVEN

↓ ECO INDUCTION NOTE

When cooking using the induction function you will decrease the energy used by 50% whilst heating and roasting your food using the cast iron cook pot with lid.




| Oven Used | Conventional Oven | Induction Oven |
|---------------------|-------------------|----------------|
| Setting | Casserole | |
| Temperature/Setting | 180°C | 150°C |
| Cook Time | 75 mins | 75 mins |
| Energy Used | 1.03 kWh | 0.43 kWh |

| Oven Used | Slow Cooker | Induction Oven |
|---------------------|-------------|----------------|
| Setting | Slow Cook | |
| Temperature/Setting | Med | 90°C |
| Cook Time | 6 hours | 6 hours |
| Energy Used | 0.54 kWh | 0.18 kWh |

| Oven Used | Steamer | Induction Oven |
|---------------------|----------|----------------|
| Setting | Steam | |
| Temperature/Setting | N/A | 180°C |
| Cook Time | 20 mins | 20 mins |
| Energy Used | 0.26 kWh | 0.14 kWh |

INDUCTION OVEN

Induction Oven Control

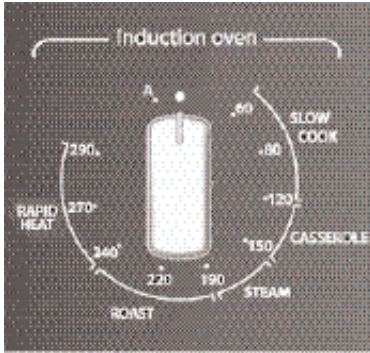

The Eco Induction oven has been designed to be a versatile oven with a number of energy efficient functions. The oven is supplied with a Cast Iron Casserole pot and 2 trivets which, can be used as instructed in the following sections.

Tip - when using the induction oven, rotate the main oven control knob anticlockwise to the light symbol to aid viewing.

The induction oven should be used as a normal oven but with the food placed in the cooking pot.

Depending on the food being cooked will depend on the type of trivet that will be used. See pages 10 & 11.

The induction oven control is labeled with temperature and cooking zones to aid your cooking. The cooking zones are a guide only and do not have to be adhered to. For instance, if you are steaming some vegetables and you wish to have a more vigorous steam, simply increase the temperature.

IMPORTANT - When using the


induction oven you **MUST** place the pot on the zone before turning the control to the desired temperature. If for any reason you remove the pot from the cooking zone, you must turn the control off and then select the desired temperature. The induction oven is designed to switch itself off if the pot is removed for any length of time. This is to prevent inadvertant operation of the cooking zone.

The oven is designed to work on a 13A supply and as such the oven cannot operate all functions together. The induction oven always takes priority, so if this is on, only the Eco grill can be used. To use either the full grill of the main oven, the induction control will need to be turned off.

INDUCTION OVEN

Each of the cooking functions requires you to use the cast iron pot placed on the Induction cooking zone in the base of the oven. This cast iron pot has been provided along with two trivets to allow the induction oven to function. Please refer to the section on trivets for usage.

When using the induction function, you **MUST** position the cast iron pot on top of the glass eco induction zone in the bases of the cavity (as shown).

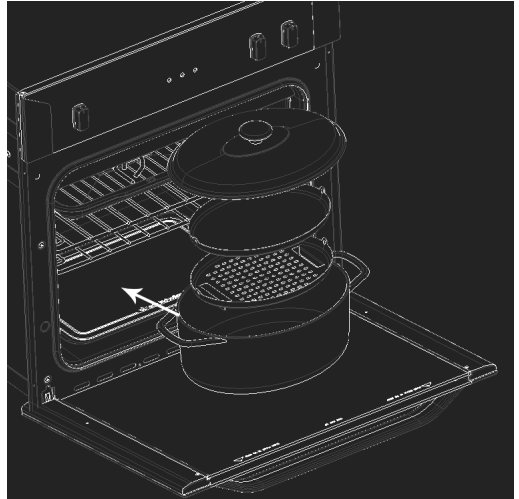

Function settings

| Position | Cooking Time (hours) | Temperature setting |
|--|----------------------|---------------------|
| Slow Cook 1 | 8 | 60 - 70°C |
| Slow Cook 2 | 6 | 70 - 90°C |
| Slow Cook 3 | 4 | 90 - 120°C |
| Casserole | No time setting | 120 - 150°C |
| Steam | No time setting | 150 - 190°C |
| Roasting (warming chilled and frozen food) | No time setting | 190 - 240°C |
| Rapid heat | No time setting | 240 - 290°C |

Slow cook

Your induction oven can be used to slow cook food in the same way as a conventional slow cooker. The slow cook zone is from 60°C to 120°C as a guide. These have a predetermined cooking time after

which the oven will turn off automatically.

Food can be placed directly in the pot when slow cooking.

- Only fill the pot half to two thirds

↓ INDUCTION OVEN

full. Any higher and food will not cook properly, any lower and the food will cook too quickly.

-Foods cooked on the bottom of the pot cook faster and will be more moist as they are immersed in the simmering liquid.

- Most meats require 8 hours of cooking on a low temperature. Moist long cooking times result in very tender meats.

- Vegetables do not cook as quickly as meat so should be placed at the bottom of the pot (if layering the food).

- Do not lift the lid to stir, as all of the heat will escape. If the lid is removed, add a further 20 minutes to half an hour to the cooking time.

The trivets supplied need not be used.


Casserole

The guide on your induction oven control shows the casserole temperature as 120°C. This will depend on the amount of time you wish to cook your food for and the amount of food in your cook pot. It may be necessary to increase the temperature beyond the casserole setting to give you your desired result. Trivets are not required.

Tip - why not set the induction control to a high temperature to get the food up to temperature then reduce to the casserole setting.

Steam

The steam setting should be used in conjunction with the steam trivet (see picture below).

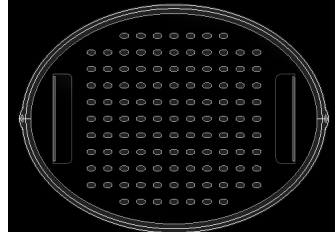

Place 200-300ml of water into the base of the pot and place the trivet inside the pot. Place the food to be steamed on the trivet and place the pot inside the oven directly on the cooking zone.

With the lid off, rotate the induction oven control to full temperature until you begin to see some steam then reduce the temperature to the steam setting (150°C - 190°C) and place the lid **firmly** on the cook pot.

Depending on the type and quantity of food being steamed will determine the actual setting for steaming. For a more vigorous steam, increase the temperature.


Note - steaming **MUST** be carried out with the main oven door open to allow any excess steam to escape.

ENSURE the water does not run dry.

↓ INDUCTION OVEN

Roast

The roast setting should be used in conjunction with the roasting trivet (see picture below).

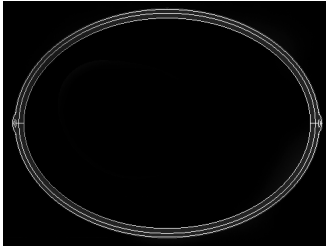

Place the roasting trivet inside the steam trivet and then both of these in the pot (see image on page 9). Place the food to be roasted on top of the trivet. Place the pot into the oven directly onto the cooking zone.

Rotate the induction oven control knob to full temperature for a few minutes to get the cook pot up to temperature. Then reduce to the desired roast setting.

Note - Roasted meats etc will appear pale when cooked inside the pot, similar to that of roasted food covered in tin foil. To brown food, simply remove the lid and use the eco fan grill setting to brown the top of your food.

Note - during roasting the pot will become hot so care should be taken when handling.

Tip - when roasting, the oven will become warm from the heat given off by the pot. Why not use this heat to

warm plates?

Tip - for more even cooking, rotate the food regularly during cooking.

Auto Preheat

The auto preheat delivers full power to the induction oven for a fixed period of time before automatically turning back down to the desired setting.

The auto preheat has been tuned to provide the best full temperature period for each setting.

| Auto Heat Up Temp. Setting | Auto Heat Up time (min) |
|----------------------------|-------------------------|
| 60 | 1 |
| 90 | 2.5 |
| 120 | 4 |
| 150 | 5 |
| 190 | 7 |
| 220 | 2 |
| 240 | 3 |
| 270 | 4 |
| 290 | n/a |

To activate Auto Preheat, rotate the induction oven control knob anticlockwise to the 'A' symbol and then rotate clockwise to the desired temperature. For example, if you are using the steam function, rotate the control knob to the 'A' symbol and then set to steam (190°C). This will give full power to get the water up to temperature much quicker, before reverting to a steady temperature for steaming.

Grill Introduction

Caution: Accessible parts may be hot when the grill is used, young children should be kept away.

The grill is a dual circuit fully variable grill. It can be used for conventional grilling or for fanned grilling.

To switch on the grill

Turn the oven control knob anti clockwise to select your preferred grill function.

To set the temperature for your grill turn the grill knob to select a setting between 1 and 5. Turn grill control knob clockwise for dual grill and anti clockwise for economy grill.

To switch off the oven, return the control knob to the "●" off position. The door must be open for conventional grilling, and closed for fanned grilling.


Preheating

For best results, preheat the grill for 3 - 5 minutes.


Aluminium foil

Using aluminium foil to cover the grill pan, or putting items wrapped in foil under the grill, can create a fire hazard, and the high reflectivity can damage the grill element.

Detachable grill pan handle

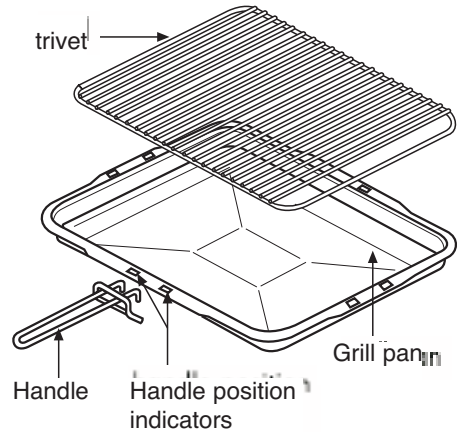

Place the handle over the edge of the grill pan, at the narrow side edges. Slide the handle to the centre, and locate between the handle position indicators.

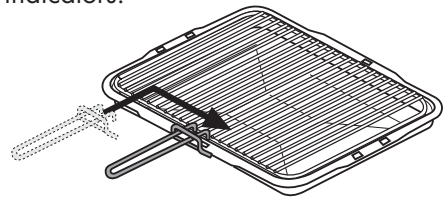

The handle should be removed from the pan during grilling, to prevent overheating.

The handle is designed for removing / inserting the grill pan under the grill when grilling.

If cleaning the grill pan when it is hot, use oven gloves to move it. *Do not* use the handle to pour hot fats from the grill pan.

Food for grilling should be positioned centrally on the trivet.

Using the Grill

Grilling

Position the grill pan under the centre of the grill.

The temperature of the grill is variable - grilling can be adjusted by turning the temperature selector control knob to the desired temperature setting.

The speed of grilling can also be controlled by selecting a higher or lower shelf position.

We recommend that the higher temperature settings are used for toasting and for cooking foods such as bacon, sausages or steaks. Use a higher shelf position.

For thicker foods such as chops or chicken joint pieces, the temperature may be reduced to a lower setting. Use a middle to low shelf position.

The grill pan trivet, inside the grill pan, can be inverted to give a high or low position, or it may be removed.

Dual Circuit Grill (Variable)

The door must be open when the grill function is used - either fully open or using the door stop position - open the door about 30° and it will hold open.

When using the door stop position for grilling, you can remove the grill pan handle by sliding it to the recess.

Thicker foods such as sausages and chicken portions are suited to conventional grilling.

Economy grilling is ideal for grilling smaller amounts of food, and the food should be placed towards the centre of the grill pan for best results.

Fanned grill

The door must be closed when the fanned grill is used.

When opening the door, take to avoid skin contact with any steam which may escape from the cooking.

- (i) Turn the (left) selector control knob to the fan grill setting.
- (ii) Turn the oven temperature control knob to your desired temperature setting.

When the grill is selected, only the inner element will come on.

Fanned grilling may be faster than conventional grilling, because air is being circulated around the food, and this portions of food, such as bacon or fish fillets may not need turning.

Fanned Oven (Selected Models)

When you are cooking, keep children away from the vicinity of the oven.

Your appliance has a fanned oven. When using the fanned oven, please follow the instructions below:

To switch on the oven

Turn the oven control knob anti clockwise to the desired temperature.

The red thermostat indicator will come on until the selected temperature is reached and then go off; it will turn on and off periodically as the thermostat operates to maintain the selected temperature.

To switch off, return the control knob to the "●" off position.

Preheating

The oven must be preheated when cooking frozen or chilled food, and we recommend preheating for yeast mixtures, batters, soufflés and whisked sponges, otherwise preheating is not necessary as a fan oven warms up quickly.

Preheat the oven until the indicator light switches off for the first time; this will take between 5 - 15 minutes, depending on the temperature selected.

Aluminium foil

Use aluminium foil only to cover food or cooking dishes. Do not foil to cover the shelves or oven base, as this creates a fire hazard.

Baking tray and roasting tins

For best cooked results and even browning, the maximum size baking trays and roasting tins that should be used are as follows;

Baking tray 350mm x 280mm

This size of baking tray will hold up to 16 small cakes.

Roasting tin 370mm x 320mm

We recommend that you use good quality cookware. Poor quality trays and tins may warp when heated, leading to uneven baking results.

Oven shelves

The oven shelf must be positioned with the upstand at the rear of the oven and facing upwards.

Position baking trays and roasting tins on the middle of the shelves, and leave one clear shelf position between shelves, to allow for circulation of heat.

Fanned Oven Continued....

Cooking with a fan oven

If you are used to cooking with a conventional oven you will find a number of differences to cooking with a fan oven which will require a different approach:

There are no zones of heat in a fan oven, the convection fan at the back of the oven ensures an even temperature throughout the oven; this makes it ideal for batch baking - eg; when planning a party or stocking the freezer, as all the items will be cooked within the same length of time.

Cooking times will generally be shorter by between 5 - 10 minutes per hour, than those given in recipe books for conventional cooking.

We recommend preheating the oven for frozen or chilled food and also for soufflés, batter mixtures & yeast mixtures. Preheat the oven until the indicator light switches off for the first time; this will take between 5 - 15 minutes depending on the temperature selected.

There is no flavour transference in a fan oven, which means you can cook strong smelling foods such as fish at the same time as mild foods - eg; milk puddings.

The fan oven may cook foods at a lower temperature (between 10°C and 20°C lower) than a conventional oven, so conventional recipe temperature may have to be reduced.

To help the air circulate freely;

- Position the shelves evenly within the oven and maintain a clearance from the oven roof and base.
- If more than one cooking dish or baking tray is to be used on a shelf leave a gap of at least 25mm / 1" between the items themselves and the oven interior.
- Allow enough space between shelves for food that will rise during cooking.
- Do not place items on the oven base as this will prevent air from circulating freely.

Slow Cooking & Frozen/chilled foods

Cooking frozen & chilled foods

- Always preheat the oven before use.
- When cooking frozen or chilled foods, please follow the food manufacturer's instructions. If cooking more than one tray or item, cooking times may need to be increased.
- Please ensure that foods are piping hot before consumption.
- Always use the temperature setting stated on the food packaging when cooking convenience food.
- Never overload the tray - eg; oven chips should be placed on the baking tray in one even layer for satisfactory cooking.
- Follow the cooking times given on the packaging, but remember that they are only intended as a guide, and do not take individual preferences into account.
- Always cook frozen convenience foods straight from the freezer unless packaging advises otherwise.

Baking Guide (Fanned Oven)

Fanned oven baking guide

Because a fan oven has an even temperature throughout the oven, no shelf positions have been given.

The cooking times are only approximate because the size and type of cooking dish will influence cooking time as will personal preferences.

| Item | Temperature at °C | Approximate cooking time |
|---|--------------------------|---|
| Small cakes | 170 - 180 | 20 - 25 mins |
| Whisked Sponge | 170 | 15 - 20 mins |
| Swiss Roll | 190 | 8 - 12 mins |
| Victoria Sandwich (2 x 205mm / 8 in) | 160 | 25 - 35 mins |
| Semi rich fruit cake (230mm / 9 in) | 140 | 2½ - 3½ hours |
| Scones | 210 - 220 | 10 - 15 mins |
| Meringues | 90 - 100 | 2 - 3 hours |
| Shortcrust Pastry | 200 | Depend on the size & type of cooking dish and also the filling. |
| Puff / Pastry | 210 | |
| Choux Pastry | 200 | |
| Biscuits | 160 - 200 | 10 - 20 mins |
| Bread (500g / 1 lb) | 210 | 20 - 30 mins |
| Sponge Pudding | 150 | 45 mins - 1 hour |
| Milk Pudding | 150 | 1½ - 1¾ hours |

Using the Oven

Traditional fruit cakes

It should be remembered that ovens can vary over time, therefore cooking times can vary, making it difficult to be precise when baking fruit cakes.

It is necessary, therefore, to test the cake before removal from the oven. Use a fine warmed skewer inserted into the centre of the cake. If the skewer comes out clean, then the cake is cooked.

- Do not attempt to make Christmas cakes larger than the oven can cope with; you should allow at least 25mm (1 inch) space between the oven walls and the tin.
- Always follow the temperatures recommended in the **recipe**.
- To protect a very rich fruit cake during cooking, tie 2 layers of brown paper around the tin.
- We recommend that the cake tin is not stood on layers of brown paper, as this can hinder effective circulation of air.
- Do not use soft tub margarine for rich fruit cakes unless specified in the recipe.
- Always use the correct size and shape of tin for the recipe quantities.

Roast turkey

Roasting turkey perfectly involves cooking two different types of meat - the delicate light breast meat, which must not be allowed to dry out, and the darker leg meat, which takes longer to cook.

The turkey must be roasted long enough for the legs to cook, so frequent basting is necessary. The breast meat can be covered once browned.

- Turkey should be roasted at 170 - 190°C for 20 minutes per 1lb, plus 20 minutes unless packaging advises otherwise.
- The turkey can be open roasted, breast side down, for half of the cook time, and then turned over for the remainder of the cooking time.
- If the turkey is stuffed, **add** 5 minutes per 1lb to the cooking time.
- If roasting turkey covered with foil, **add** 5 minutes per 1lb to the cooking time.

To test if the turkey is cooked, push a fine skewer into the thickest part of the thigh. If the juices run clear, the turkey is cooked. If the juices are still pink, the turkey will need longer cooking.

Roasting Guide

Roasting guide

The times given in the roasting guide are only approximate, because the size and age of the bird will influence cooking times as will the shape of a joint and the proportion of bone.

Frozen meat should be thoroughly thawed before cooking. For large joints it is advisable to thaw overnight.

Frozen poultry should be thoroughly thawed before cooking. The time required depends on the size of the bird - eg; a large turkey may take up to 48 hours to thaw.

Use of a trivet with a roasting tin will reduce fat splashing and will help to keep the oven interior clean. Alternatively, to help reduce fat splashing, potatoes or other vegetables can be roasted around the meat / poultry.

Notes;

- When cooking stuffed meat or poultry, calculate the cooking time from the total weight of the meat plus the stuffing.
- For joints cooked in foil or covered roasters, and for lidded casseroles, add 5 minutes per 450g (1lb) to the calculated cooking time.
- Smaller joints weighing less than 1.25kg (2½lb) may require 5 minutes per 450g (1lb) extra cooking time.
- Position the oven shelf so that the meat or poultry will be in the centre of the oven.
- It is recommended that the appliance is cleaned after open roasting.

| Cook in oven at 180°C (fanned) Cook in oven at 200°C (conv) | | Approximate cooking time (preheated oven) |
|--|-----------------------------|--|
| Beef | Rare Medium Well done | 20 minutes per 450g (1lb), plus 20 minutes 25 minutes per 450g (1lb), plus 20 minutes 30 minutes per 450g (1lb), plus 30 minutes |
| Lamb | Medium Well done | 25 minutes per 450g (1lb), plus 25 minutes 30 minutes per 450g (1lb), plus 30 minutes |
| Pork | | 35 minutes per 450g (1lb), plus 35 minutes |
| Poultry | | 20 minutes per 450g (1lb), plus 20 minutes |

Automatic Cooking Introduction (Selected Models)

Automatic cooking

The automatic cooking facility is controlled by the programmer (see 'Programmer/ Clock' section) and allows complete meals, or individual dishes to be cooked while you are out of the house, to be ready for when you return. The 'Ready Time' should be set as close as possible to, or just after your anticipated return so food is not left standing in a warm oven.

Please note: Not all appliances have this feature.

Do:

- Select foods which are as fresh as possible, and as cold as possible - ie; preferably straight from the refrigerator.
- Choose foods which are suitable for cooking from a cold start, as some dishes will be affected by being left uncooked, at room temperature, perhaps for several hours - eg; a wet filling on a pastry base.
- Make sure that meat and poultry are thoroughly thawed (but still cold from the refrigerator), before placing them in the oven, and avoid using rolled joints of meat which can be more susceptible to the growth of food poisoning organisms.
- Cover dishes with lids or foil to keep the food moist, prevent the transfer of odours, and protect from possible contamination; the food can be uncovered towards the end of cooking to crisp and brown.

Do not:

- Warm food should never be placed in the oven if there is a delay period. Stews prepared by frying the meat and vegetables first should be cooked as soon as possible, or refrigerated prior to placing in the oven.
- Some dishes are not suitable for cooking on automatic - eg; dishes containing left over cooked meat or poultry, eggs, cooked rice or seafood.
- Do not put food items (intended for automatic cooking) into a warm oven. Allow the oven to cool before setting for automatic cooking.
- Do not over-fill dishes containing liquids as they might boil over.
- Never leave food in the oven to cool slowly after cooking; serve immediately or refrigerated.
- Never use the automatic facility to reheat 'cook chill' foods as they should go straight from the refrigerator into a preheated oven.

Automatic Cooking Continued.....

Important: Food is more susceptible to the growth of food poisoning organisms in warm conditions. If the weather is hot, either take care to ensure that food is not left standing in a warm oven, or avoid using the automatic cooking facility.

Hints for automatic cooking

- Food is placed in a cold oven so you will need to add about 10 - 15 minutes onto the cooking time to allow for the oven to reach the selected temperature.
- Wine or beer may ferment, and cream may curdle during the delay period, so it is best to add these ingredients just before serving.
- Potatoes should be parboiled or brushed with oil to prevent discolouration during the delay period.
- Meat can be brushed with oil to prevent it drying.
- Lemon juice can be added to certain fruits and vegetables such as apples, pears, turnips and parsnips to prevent discolouration during the delay period.

Programmer/Clock (Selected Models)

 

The programmer buttons

∨ minus

∧ plus

Function

The 'Function' button in the centre is used for setting the minute minder and setting up the automatic cooking. See below for details.

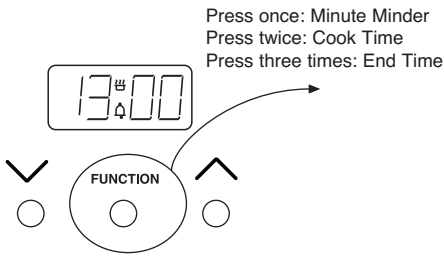


Minute Minder Symbol

This Bell symbol appears when the Minute Minder function has been selected. While the Minute Minder is being set, the Bell symbol flashes. Once the length of time is set, the Bell symbol remains lit until the time runs down, or the function is cancelled.



This message and 'A' symbol appear when you are asked to set the length of time you require the oven to cook automatically for. Using the 'Plus' and 'Minus' buttons adjusts this accordingly.

Symbols on the LED display.

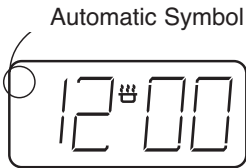


This 'A' symbol appears when either a semi, or fully automatic program is selected. This symbol will flash while a program is being set. Once a program is set the symbol will light up, and remain lit until the alarm sounds, or the program is cancelled



This message and 'A' symbol appear when you are asked to enter in an end time, or when you would like the oven to switch itself off.

Programmer/Clock Continued....

To set the time of day

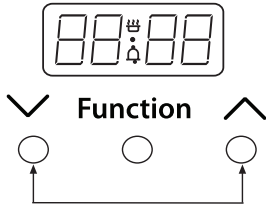


- ◆ Press the 'Plus' and 'Minus' buttons together for a few seconds, and release.
- ◆ The '●' in between the numbers on the LED Display will begin to flash.
- ◆ While the '●' is flashing it is possible to adjust the time using the 'Plus' and 'Minus' buttons. Once the time has been set, allow approximately 30 seconds before using any of the other timer functions. This ensures that the time will remain correct.

To select an alarm tone

There are three tones to chose from.

- ◆ Press and hold the 'Minus' button to listen to the first tone.
- ◆ Release the 'Minus' button and press it again to listen to the second tone etc.
- ◆ Releasing the 'Minus' button after the tone has sounded will automatically select that tone

Setting the minute minder

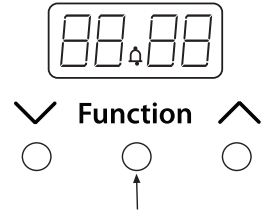

- ◆ To set the Minute Minder, press the 'Function' button once. The bell symbol will appear and start flashing. The flashing only lasts for 5 seconds so the time must be set within this time frame.
- ◆ Use the 'Plus' and 'Minus' button to set the length of time required. Once this has been done, the Minute Minder is set.
- ◆ When the desired length of time has counted down the alarm will sound.
- ◆ To cancel the tone, press any of the buttons.
- ◆ To cancel the Minute Minder at any time, press the 'Function' button, then press the 'Plus' and 'Minus' buttons together.

Programmer/Clock Continued.....

Semi-automatic cooking

There are two types of semi automatic cooking available on this appliance.

The oven must be switched on, and in use to use either of these functions successfully.

The '*Duration*' method allows you to set the oven for a specific length of time. For example, if a dish needed 2 hours to cook, then it would be possible for you to set the oven to turn off 2 hours later. This allows you to be sure that your food will be cooked for a set length of time and no longer.

The '*End*' time method allows you to enter a specific time when you would like the oven to switch off. If you wish to leave the oven unattended, then it offers peace of mind that the oven will have turned itself off at the set time.

However, once the program is set then it cannot be adjusted. Extra time cannot be added, nor can the end time be extended.

To cancel the semi automatic programs, press both the '*Plus*' and '*Minus*' buttons together. This can be done at any time during the cooking process. Then if necessary, re program.

For the instructions on how to use both of these functions, please see the following page.

Fully automatic cooking

This function incorporates both a duration and an end time and is meant to be used when you wish to delay the start time.

We recommend that the first few times this function is used you are in the house, this will familiarise you with your oven and prevents food from being over cooked or under cooked.

Care must be taken when selecting foods for this function, it is not recommended for certain food items which may spoil, or are sensitive to being left.

It is also advisable to set the end time to be as close to your return as possible to prevent food being left standing.

To check the '*Duration*' time set press the function button twice. To check the '*End*' Time press the function button three times.

To cancel the automatic programmer press the '*Plus*' and '*Minus*' buttons together and then make sure the oven is switched off.

Using the Programmer/Clock

Semi-automatic cooking (example)

The 'Duration' method

◆ Press the 'Function' button twice, **(1)** which will skip past the Minute Minder.

◆ The LED display will flash the word 'dur', **(2)** and the 'A' will flash on the left hand side of the display.

◆ Use the 'Plus' and 'Minus' buttons to set the length of time you want to cook for. **(3)** This must be done within 5 seconds or the time of day will show again.

Once this is done the oven will automatically switch off once the time has elapsed, and the alarm will sound.

To switch off the alarm, press any button. To view any remaining time press the 'Function' button twice

The 'End' Time method


◆ Press the 'Function' button three times, which will skip past the Minute Minder and the Duration programmer. **(4)**

◆ The LED display will flash the word 'End' and the 'A' will flash on the left hand side of the display. **(5)**

◆ Use the 'Plus' and 'Minus' buttons to select the time the oven is required to turn off. **(6)**

Once this is done the oven will turn itself off at the time you have selected. To switch off the alarm, press any button.



1. The 'Duration' method

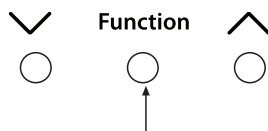


2.



 3.

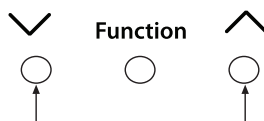



4. The 'End' Time method

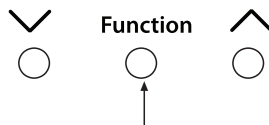

5.



  6.



Using the Programmer/Clock Continued.....

Fully automatic cooking (example)

This programming method is best suited for when a delayed start time is required. Unlike the semi automatic methods this requires both the duration and the end time to be entered. The timer will work out the start time and begin cooking.

◆ Press the 'Function' button twice to select the length of time your food will need. **(7)**

◆ The 'A' on the left hand side will flash and the 'dur' message will flash up. **(8)**

◆ Using the 'Plus' and 'Minus' buttons set the time you require within 5 seconds of the 'dur' message. **(9)**


◆ Press the function button three times until the 'A' flashes again and the 'End' messages appears. **(10) & (11)**

◆ Using the 'Plus' and 'Minus' buttons, set the time you would like the oven to switch off. **(12)**

◆ Set the temperature of the oven and place the food inside. While the automatic function is running, the 'A' will appear statically on the display, with the time.

Try to keep the end time as close to when you expect to return, this will prevent cooked food from being left standing in a warm oven. The timer will calculate the appropriate start time.


7

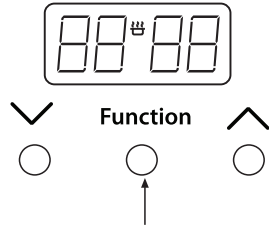


8



9

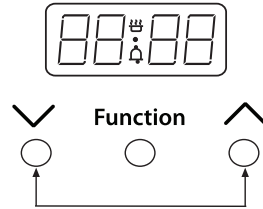


10

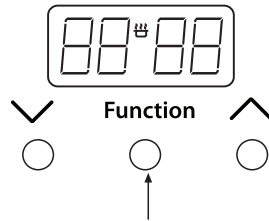

11



12

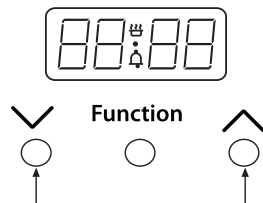

Cleaning

Caution: Any cleaning agent used incorrectly may damage the appliance.

Always let the oven cool before cleaning.

Some cooking operations generate considerable amount of grease, this combined with spillage can become a hazard if allowed to accumulate on the appliance through lack of cleaning. In extreme cases this may amount to misuse of the appliance and could invalidate your guarantee.

It is recommended that the appliance is cleaned after open roasting.

Do not use caustic, corrosive or abrasive cleaning products, products containing bleach, coarse wire wool or any hard implements, as they will damage the surfaces.

All parts of the oven can be safely cleaned with a cloth wrung out in hot soapy water.

To avoid damaging the surfaces when removing stubborn marks, we recommend the following:

Painted, plastic and metal finish parts (where fitted)

OVEN DOOR, DOOR HANDLE, CONTROL KNOBS

Only use a clean cloth wrung out in hot soapy water.

Vitreous enamel parts

GRILL PAN, OVEN COMPARTMENT FLOOR

Use a mild cream cleaner - eg; "Cif".

Stubborn marks may be removed with a moistened "Brillo" pad.

The grill pan may be cleaned in a dishwasher, or with a nylon brush in hot soapy water.

Chrome plated parts

OVEN SHELVES & OVEN SHELF RUNNERS, GRILL PAN TRIVET

Do not use abrasives or polishes. Use a moist soap pad.

Shelf runners can be removed for cleaning. Grasp the runners, and slide out of the hanging holes as shown.

Note: These items may also be cleaned in a dishwasher.

Cleaning Continued.....



Glass parts

FASCIA PANEL & DOOR PANELS

Use a mild cream cleaner - eg; "Cif". Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners or polishes. Do not scrape around the glass base as this may cause damage to the seal.

To remove the glass panel for cleaning, open the door to the door stop position (about 30° open), hold the top and bottom edges of the panel and slide out. Note that if the door is opened fully when removing the inner door glass panel, the door may spring shut.

Important: if the inner door glass panel is removed for cleaning, it must be replaced the right way up as shown, and pushed fully in to the stop position.

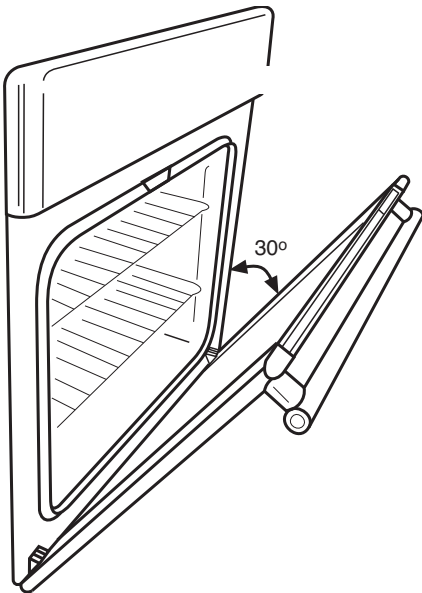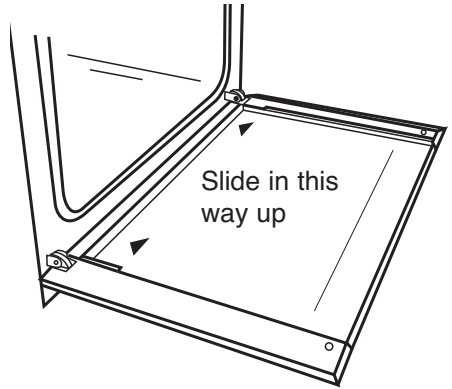

Door stop position

Cleaning Continued.....

Stainless steel surfaces (stainless steel finish models only)

FASCIA PANEL, HANDLES

Only use a clean cloth wrung out in hot soapy water, and dry with a soft cloth.

Stubborn marks can be removed using "Luneta". We recommend that you clean the whole of the stainless steel area to maintain a uniform finish. Supplies can be purchased from the Customer Care Centre.

Do not use undiluted bleach or any products containing chlorides as they can permanently damage the steel.

Extra care should be taken when cooking food in salted water. Some foods are corrosive - eg; vinegar, fruit

juices and especially **salt** - they can mark or damage stainless steel if they are left on the surface. Turn off and wipe any spillage immediately, taking care to avoid skin contact with any hot surface or spillage.

Sharp objects can mark the surface of stainless steel, but marks will become less noticeable with time.

To maintain the finish of the stainless steel, or to remove any greasy marks, wipe the stainless steel surface sparingly with a *minimum* amount of Baby Oil and kitchen paper. Do not use cooking oils, as these may contain salt, which can damage the stainless steel surface.

Installation Instructions


Step 1: Prepare installation

Do not lift the oven by the door handle.

Whilst every care is taken to eliminate burrs and raw edges from this appliance, please take care when handling - we recommend the use of protective gloves during installation.

Please note that the weight of this appliance is approximately **27kg** (unpacked). Take care when lifting it into the housing unit - always use an appropriate method of lifting.


If this appliance is to be installed near to a corner where the adjacent cabinets run at right angles forward of the appliance, there must be a gap of at least 90mm between the appliance and the cabinets, to prevent overheating of the cabinets.

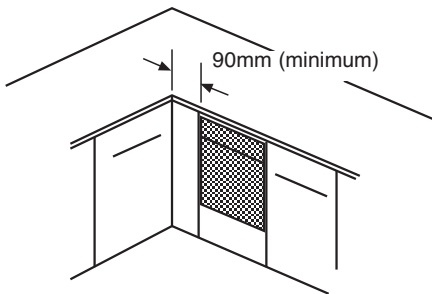

Remove the fixing screws from the polythene bag on the top of the appliance, but leave the appliance in the base tray packaging until you are ready to install it.

Note: When removing the appliance from the base tray packaging care should be taken not to damage the appliance.

1. When installing in a typical 600mm deep, built in housing unit, the false back should be removed from the housing unit to provide the necessary depth for installation.
2. When the false back is removed, it is normally the case that the support shelf for the appliance leaves a gap between the back edge and the wall of approximately 80mm.
3. If no gap occurs between the back edge of the shelf and the wall behind the unit, we recommend that a gap of at least 30mm is made by shortening the shelf.

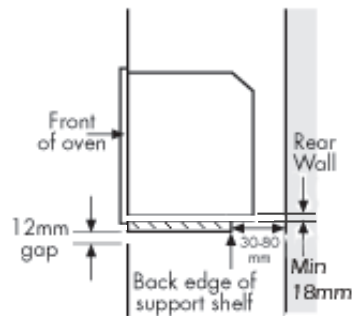

Installation Instructions

The appliance is designed to fit into a standard 600mm wide housing unit, with **minimum** internal dimensions as shown.


Note: **590mm** is to the underside of the worktop when the appliance is built under, or to the underside of the panel above, when the appliance is installed into a tall housing unit.

Please note that all sizes are nominal, and some variation is to be expected.


Installing appliance under a worktop

Where the appliance is installed under a worktop, with a hob installed above it, the installation instructions for the hob must be read in conjunction with these instructions.

Installation with runners

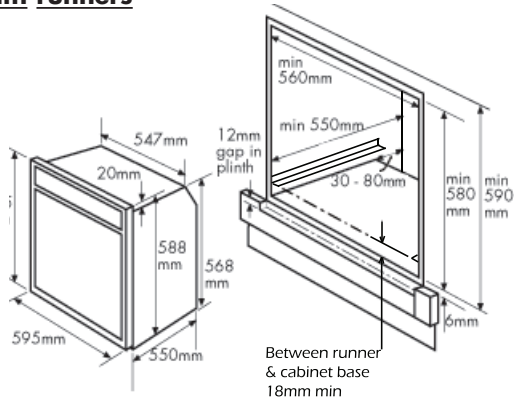

Installation with cutout in shelf

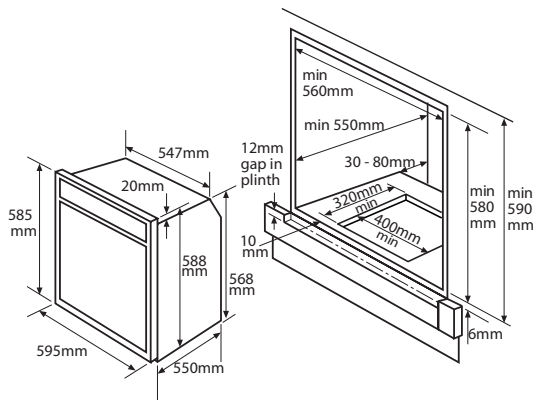

Installation Instructions

Step 2: Connect to the electricity supply

We recommend that the appliance is connected by a competent person, who is a member of a competent person scheme and who will comply with the I.E.E. and local regulations.

Important: Ensure that you route all mains electrical cables well clear of any adjacent heat source, such as an oven or grill.

Warning: This appliance must be earthed.

1. A fixed connection is used, a device allowing the appliance to be isolated on all poles from the mains supply with a contact opening width of at least 3mm must be provided.


Use a 13 amp fuse.

2. It is recommended that type HO5 V V-F cable must be used as the mains lead.
3. The mains terminal block is positioned at the right hand rear of the top service panel.
5. Connect the cable to the terminal block, and tighten the cable clamp.
6. Close the terminal box, ensuring that the cover is engaged on the locking tabs.

Step 3: Check edging strip

The edging strip is factory fitted to the front side edges of the appliance front frame. This strip provides the cabinetry with extra protection from any escape of heat.

When installing the product, ensure that the edging strip is correctly located on the outer edges of the front frame, before positioning and securing the appliance to the cabinet.

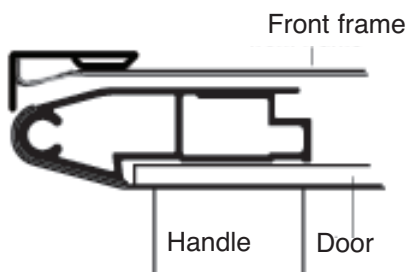


When securing the appliance, the fixing screws provided are driven through the edging strips into the cabinet - the seal will straighten up and sit flush to the cabinet when the screws are fully home.

Installation Instructions

Step 4: Secure appliance into housing unit

Insert appliance into cabinet.

To secure the appliance to the housing unit, open the oven door and screw 4 screws - 2 at top, 2 at bottom - through the holes in the front frame.

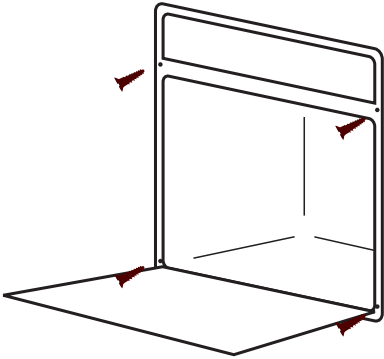

Note: The unit housing the appliance must be appropriately fixed.

Technical Data

Power supply

220 - 240V ~ 50Hz 3100W

Warning: This appliance must be earthed.

Belling Customer Care

Please keep this handbook in a safe place as the information inside may be of use should you sell, or pass on the appliance. Please fill in the model number and serial number in the spaces provided below as they will assist us should you need to call.

0844 815 3746

When you dial this number you will hear a recorded message and be given a number of options. This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care Representatives become available.

Enter appliance numbers here for future reference:

| | | | | | | | | | |
|-----------|---|---|--|--|--|--|--|--|--|
| Model No | | | | | | | | | |
| 4 | 4 | 4 | | | | | | | |
| Serial No | | | | | | | | | |
| | | | | | | | | | |

These numbers can be found on your appliances data badge.
Outside the UK and Northern Ireland, refer to your local supplier.

Patent pending (application 0911932.2)