



Product features:

- Metal construction throughout
- Leading design features requiring high pressure
- Quarter turn handle action for precise flow control
- Fixed spout to prevent accidental water damage
- Adjustable to suit various thickness of wall

Packaged properties:


Box length: 360 mm **Box depth:** 100 mm
Box width: 195 mm **Boxed weight:** 3.68 kg

Includes pop up waste?: No

Additional comments:

Adjustable handle alignment, includes mounting box, spirit level & 2.5mm allen key

Product dimensions:

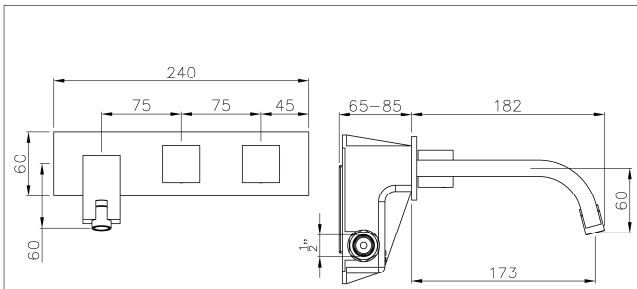

- **Overall Height / projection:** 182 mm
- **Exit reach:** 173 mm
- **Exit height:** 60 mm
- **Centre distance(s):**
- **Base diameter(s):** 240 x 60 mm
- **Product mounted where:** Wall
- **Recommended hole diameter:** 250 x 145 mm
- **Min. fitting depth required:** 65 - 85 mm
- **Max. surface depth:**

Zeal
wall mounted wash basin mixer


AB1277 v1

(c) abode home products ltd
www.abode.eu

abode

our policy is to continually improve and develop products, and accordingly we reserve the right to amend specifications without prior notice.

Product flow characteristics:

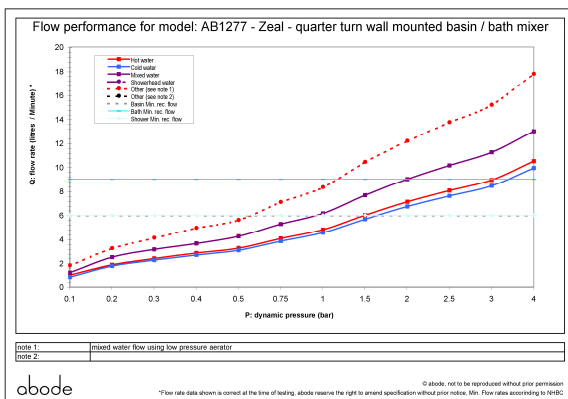

- **Min / Max water pressure:** 1 basin & 2 bath / 5 bar
- **Part G mixed flow rate at 3 bar (l/m):** 11.24
- **Max water temperature:** 70° C
- **Product flow characteristics:** Single flow
- **Aerator type:** Plastic honeycomb
- **Includes output diverter?:** No
- **Control valve type:** 1/2" QT CD (8-20)
- **Non return valve position:**
- **Mesh particle filter size:**
- **Inlet / outlet size:** 1/2" F / M15
- **Inlet type / length:** Flexi / 310 mm
- **Shower hose type / length:**

Warranty Summary (Full details available on request):

- Materials and workmanship defects warranted for 5 years
- Valves and working parts warranted for 2 years
- Surface warranty defects warranted for 1 year
- O-rings, hoses & gaskets warranted for 1 year

Care instructions:

- Clean the mixers and showers regularly as required, using soap, do not use any other cleaners.
- Regular cleaning will prevent the build up of lime scale and dirt
- After cleaning rinse thoroughly with clean water to remove any cleaner residue
- Residues of liquid soaps, shampoos and shower foams can also cause damage, so rinse with clean water after using, avoid contact with any abrasives