Monument Tools Ltd. Restmor Way • off Hackbridge Road Hackbridge • Wallington • Surrey SM6 7AH • United Kingdom Tel : +44 (0)20 8288 1100

Fax : +44 (0)20 8288 1108



Email : info@monument-tools.com

Over 70 years of excellence as hand tool manufacturers and distributors of equipment for the plumbing and drainage industry Registered in England at the above address, certificate no. 281817. VAT Registered No. GB 217 8102 81

PRODUCT INSTRUCTIONS

Product Code : 2036T

Description :


15mm & 22mm Olive Remover

INSTRUCTIONS

This tool is suitable to remove olives from most 15mm and 22mm compression fittings. Prior to use, ensure pipe end is clean, burr free and not distorted.


REMOVAL OF 15MM OLIVES

Set the **Spindle(2)** into the **15mm Body(3)**, retract the **Spindle** until it stops, fit onto 15mm pipe and tighten the compression fitting nut(5) onto the **15mm Body**. Slowly rotate the **Spindle** using the **Tommy Bar(1)** to pull the olive(4) from the pipe. Remove the compression fitting nut and the olive will be contained in the **15mm Body**.

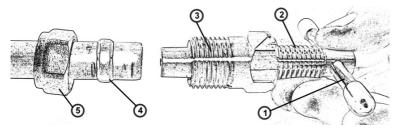

REMOVAL OF 22MM OLIVES

Retract the **Spindle(2)** in the **15mm Body(3)** until it stops. Set the **15mm Body** and **Spindle** into the **22mm Adaptor(6)**, fit the **22mm Pusher(7)** into the end of the pipe. Fit **22mm Adaptor** onto the 22mm pipe and tighten the compression fitting nut(9) onto the **22mm Adaptor**. Slowly rotate the **Spindle** using the **Tommy Bar(1)** to pull the olive(4) from the pipe. Remove the compression fitting nut and the olive will be contained in the **22mm**

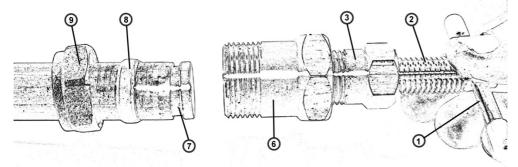


Adaptor.

Note: Always use a new olive when refitting the compression fitting

PARTS LIST (5 parts)

- (1) TOMMY BAR with END CAPS
- (2) SPINDLE
- (3) 15MM BODY
- (6) 22MM ADAPTOR BODY
- (7) 22MM PUSHER

UK PATENT GB2384456

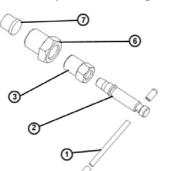



M:\Sales Office\Product Instructions & Technical Specs\2036T Olive Remover Instructions.doc